


KNX K8

Actuator for Heating and Cooling

Item number 70321

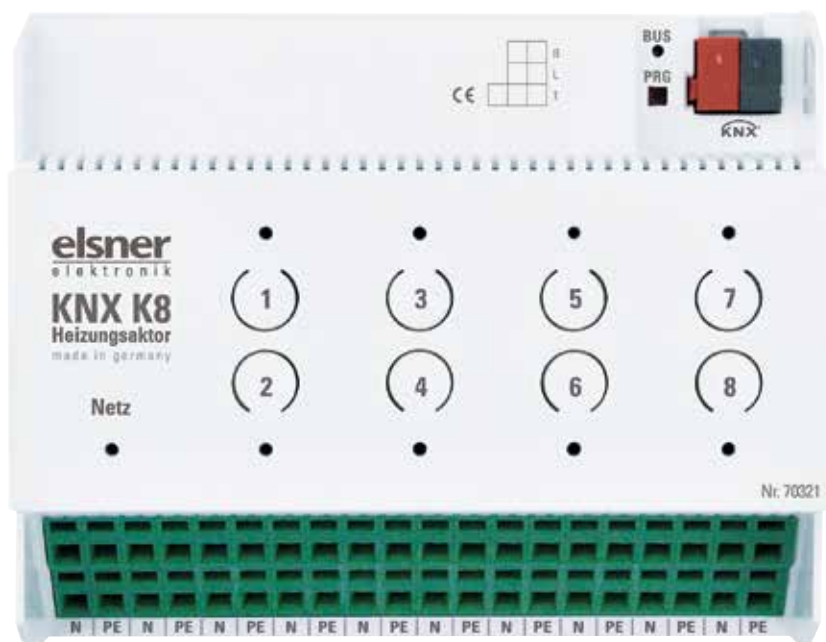

1. Description	3
1.1. Technical data	3
2. Installation and start-up	4
2.1. Installation notes	4
2.2. Device connection and design	5
2.3. Notes on mounting and commissioning	5
2.3.1. Buttons and LEDs for the output channels	5
3. Transmission protocol	7
3.1. List of all communications objects	7
4. Parameter setting	10
4.1. Behaviour on power failure/ restoration of power	10
4.2. General settings	10
4.3. Channel 1...8	11
4.4. Temperature controller	13
4.4.1. General regulation	13
4.4.2. General set point values	15
4.4.3. Heating control level 1/2	18
4.4.4. Cooling control level 1/2	20



Installation, inspection, commissioning and troubleshooting of the device must only be carried out by a competent electrician.

This manual is amended periodically and will be brought into line with new software releases. The change status (software version and date) can be found in the contents footer. If you have a device with a later software version, please check **www.elsner-elektronik.de** in the menu area "Service" to find out whether a more up-to-date version of the manual is available.

Clarification of signs used in this manual



Safety advice.



Safety advice for working on electrical connections, components, etc.

DANGER!

... indicates an immediately hazardous situation which will lead to death or severe injuries if it is not avoided.

WARNING!

... indicates a potentially hazardous situation which may lead to death or severe injuries if it is not avoided.

CAUTION!

... indicates a potentially hazardous situation which may lead to trivial or minor injuries if it is not avoided.



ATTENTION! ... indicates a situation which may lead to damage to property if it is not avoided.

ETS

In the ETS tables, the parameter default settings are marked by underlining.

1. Description

The **KNX K8 actuator** offers eight internal temperature regulators and eight output channels for controlling heating or cooling systems. The temperature regulators can control both the outputs on the **KNX K8** and other climate control system on the KNX-Bus.

In automatic mode, the temperature regulators are set at nominal temperatures for different modes. This way, it is easy to switch between the modes, comfort, standby, eco and building protection. The switch is made via an object e. g. via a manual switch, time switch or sensor switch outputs in the KNX-System.

The buttons on the device allow for direct manual switching of the connected systems. LEDs show whether the output channel was manually operated or is running in an automatic mode.

Functions:

- **8 internal, independent temperature regulators** with automatic controls for the **heating and cooling controls** (one or two step heating and cooling)
- **8 output channels** (230 V AC, 8 Watt per output) with pulse width modulation control (PWM) for actuators
- Keypad field **8 buttons** and status LEDs

Configuration is made using the KNX software ETS. The **product file** can be downloaded from the Elsner Elektronik homepage on www.elsner-elektronik.de in the "Service" menu.

1.1. Technical data

Housing	Plastic
Colour	White
Mounting	Series installation on mounting rail
Protection category	IP 20
Dimensions	approx. 107 x 88 x 60 (W x H x D, mm), 6 modules
Weight	approx. 270 g
Ambient temperature	Operation -20...+70°C, storage -55...+90°C
Ambient humidity	max. 95% RH, avoid condensation
Operating voltage	230V AC, 50 Hz
Power consumption	max. 2 W
Power	on bus: 10 mA
Outputs	8 x 230 V (OUT/N), not short-circuit-proof. When connecting one consumer load per separate channel (1 to 8): Max. load for continuous operation: 8 W per channel Max. switch-on current: 1.1 A per channel Observe the specifications in the data sheet of the consumer load.
Data output	KNX +/- bus connector terminal

BCU type	unit's own microcontroller
PEI type	0
Group addresses	max. 254
Assignments	max. 254
Communication objects	249

The product conforms with the provisions of EU directives.

2. Installation and start-up

2.1. Installation notes



Installation, testing, operational start-up and troubleshooting should only be performed by an electrician.



DANGER!

Risk to life from live voltage (mains voltage)!

There are unprotected live components within the device.

- VDE regulations and national regulations are to be followed.
- Ensure that all lines to be assembled are free of voltage and take precautions against accidental switching on.
- Do not use the device if it is damaged.
- Take the device or system out of service and secure it against unintentional use, if it can be assumed, that risk-free operation is no longer guaranteed.


The device is only to be used for its intended purpose. Any improper modification or failure to follow the operating instructions voids any and all warranty and guarantee claims.

After unpacking the device, check it immediately for possible mechanical damage. If it has been damaged in transport, inform the supplier immediately.

The device may only be used as a fixed-site installation; that means only when assembled and after conclusion of all installation and operational start-up tasks and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

2.2. Device connection and design

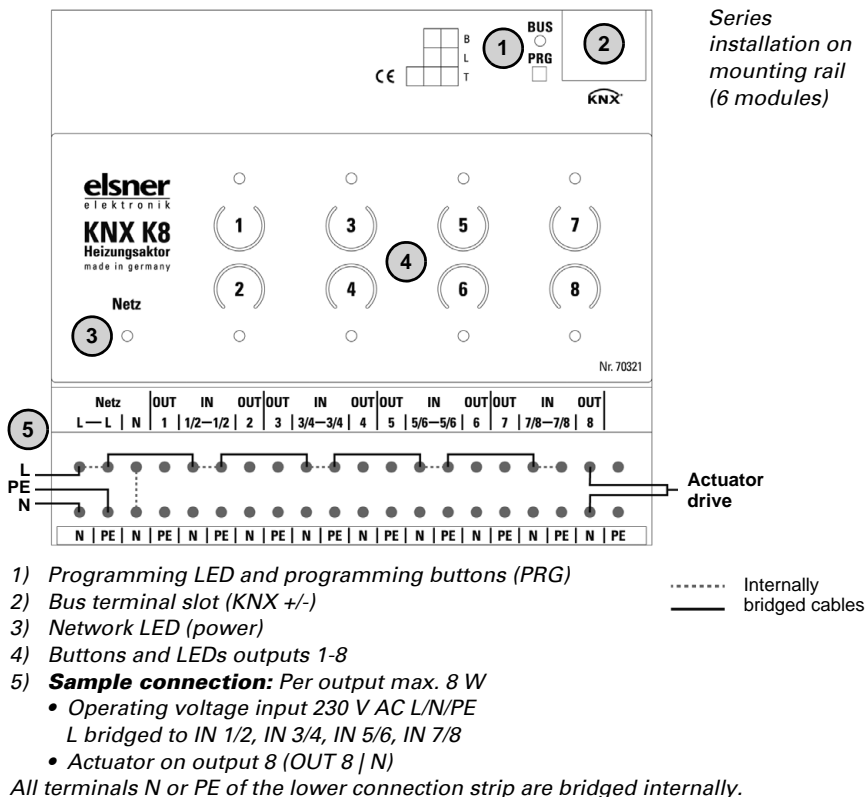

2.3. Notes on mounting and commissioning

Device must not be exposed to water (rain). This could result in the electronics being damaged. A relative air humidity of 95% must not be exceeded. Avoid condensation.

After the operating voltage has been applied, the device will enter an initialisation phase lasting a few seconds. During this phase no information can be received or sent via the bus.

2.3.1. Buttons and LEDs for the output channels

The buttons on the devices can be deactivated in the ETS (active when delivered).

Buttons

brief button press (<0,5 s)	LED shows current status (see ETS parameter: Channel LED)
button press >0,5 s	<i>in Automatic mode:</i> Switching to Manual mode <i>in Manal mode:</i> Switching from manually ON to manually OFF and reverse
long button press (>3 s)	Switching to Automatic mode (when activated in ETS)

LEDs

Behaviour of the LEDs for the output channels

in Automatic mode:

Off	Actuating variable = 0%
On	Actuating variable > 0%

in Manual mode:

Flashes slowly	Manually OFF
Flashes fast	Manually ON

3. Transmission protocol

Units:

Temperatures in degrees Celsius

Variables in %

3.1. List of all communications objects

Abbreviation flags:

C Communication

R Reading

W Writing

T Transferring

U Updating

No.	Name	Function	DPT	Flags
0	Software version	Output	217,001	C R T
1	Channel 1: Control / Status	Input / Output	5,001	C R W T
2	Channel 1: Auto / Manual	Input / Output	5.002	C R W T
3	Channel 1: Block	Input	1.001	K S
4	Channel 2: Control / Status	Input / Output	5,001	C R W T
5	Channel 2: Auto / Manual	Input / Output	5.002	C R W T
6	Channel 2: Block	Input	1.001	K S
7	Channel 3: Control / Status	Input / Output	5,001	C R W T
8	Channel 3: Auto / Manual	Input / Output	5.002	C R W T
9	Channel 3: Block	Input	1.001	K S
10	Channel 4: Control / Status	Input / Output	5,001	C R W T
11	Channel 4: Auto / Manual	Input / Output	5.002	C R W T
12	Channel 4: Block	Input	1.001	K S
13	Channel 5: Control / Status	Input / Output	5,001	C R W T
14	Channel 5: Auto / Manual	Input / Output	5.002	C R W T
15	Channel 5: Block	Input	1.001	K S
16	Channel 6: Control / Status	Input / Output	5,001	C R W T
17	Channel 6: Auto / Manual	Input / Output	5.002	C R W T
18	Channel 6: Block	Input	1.001	K S
19	Channel 7: Control / Status	Input / Output	5,001	C R W T
20	Channel 7: Auto / Manual	Input / Output	5.002	C R W T
21	Channel 7: Block	Input	1.001	K S

No.	Name	Function	DPT	Flags
22	Channel 8: Control / Status	Input / Output	5,001	C R W T
23	Channel 8: Auto / Manual	Input / Output	5.002	C R W T
24	Channel 8: Block	Input	1.001	K S

Temperature control (TC)

T C 1	T C 2	TC 3	TC 4	TC 5	TC 6	TC 7	TC 8	Name	Func tion	DPT	Flags
25	53	81	109	137	165	193	221	TC_X_measured temperature value	Input	9,001	K S
26	54	82	110	138	166	194	222	TC_X_Eco- Standby HVAC 1	Input	1,003	K S
27	55	83	111	139	167	195	223	TC_X_comfort activation HVAC 2	Input	1,003	K S
28	56	84	112	140	168	196	224	TC_X_Frost/heat activation	Input	1,003	C R W T
29	57	85	113	141	169	197	225	TC_X_Blocking object	Input	1.003	K S
30	58	86	114	142	170	198	226	RC_X_Current set point	Output	9,001	C R T
31	59	87	115	143	171	199	227	TC_X_Switching object (0:Heating 1:Cooling)	Input	1,002	K S
32	60	88	116	144	172	200	228	TC_X_Set point, comfort heating	Input / Output	9,001	C R W T
33	61	89	117	145	173	201	229	TC_X_Set point, comfort heating (1:+ 0:-)	Input	1.002	K S
34	62	90	118	146	174	202	230	TC_X_Set point, comfort cooling	Input / Output	9,001	C R W T
35	63	91	119	147	175	203	231	TC_X_Set point, comfort cooling (1:+ 0:-)	Input	1.002	K S
36	64	92	120	148	176	204	232	TC_X_Set point, standby heating	Input / Output	9,001	C R W T

TC 1	TC 2	TC 3	TC 4	TC 5	TC 6	TC 7	TC 8	Name	Function	DPT	Flags
37	65	93	121	149	177	205	233	TC_X_ Set point, standby heating (1:+ 0:-)	Input	1.002	K S
38	66	94	122	150	178	206	234	TC_X_ Set point, standby cooling	Input / Output	9,001	C R W T
39	67	95	123	151	179	207	235	TC_X_ Set point, standby cooling (1:+ 0:-)	Input	1.002	K S
40	68	96	124	152	180	208	236	TC_X_ Set point, eco heating	Input / Output	9,001	C R W T
41	69	97	125	153	181	209	237	TC_X_ Set point, eco heating (1:+ 0:-)	Input	1.002	K S
42	70	98	126	154	182	210	238	TC_X_ Set point, eco cooling	Input / Output	9,001	C R W T
43	71	99	127	155	183	211	239	TC_X_ Set point, eco cooling (1:+ 0:-)	Input	1.002	K S
44	72	100	128	156	184	212	240	TC_X_ Control variable, heating (level 1)	Output	5,001	C R T
45	73	101	129	157	185	213	241	TC_X_ Control variable, heating (level 2)	Output	5,001	C R T
46	74	102	130	158	186	214	242	TC_X_ Control variable, cooling (level 1)	Output	5,001	C R T
47	75	103	131	158	187	215	243	TC_X_ Control variable, cooling (level 2)	Output	5,001	C R T
48	76	104	132	160	188	216	244	TC_X_ Status Heating 1 (1=ON 0=OFF)	Output	1.002	C R T
49	77	105	133	161	189	217	245	TC_X_ Status Heating 2 (1=ON 0=OFF)	Output	1.002	C R T

T C 1	T C 2	TC 3	TC 4	TC 5	TC 6	TC 7	TC 8	Name	Func tion	DPT	Flags
50	78	106	134	162	190	218	246	TC_X_Status Cooling 1 (1=ON 0=OFF)	Outp ut	1.002	C R T
51	79	107	135	163	191	219	247	TC_X_Status Cooling 2 (1=ON 0=OFF)	Outp ut	1.002	C R T
52	80	108	136	164	192	220	248	TC_X_ Comfort Delay status	Input / Outp ut	1,002	C R W T

4. Parameter setting

4.1. Behaviour on power failure/ restoration of power

Behaviour on bus or auxiliary power failure:

The device transmits nothing.

Behaviour on bus or auxiliary voltage restoration and following programming or reset:

The device sends all outputs according to their transmission behaviour set in the parameters with the delays established in the "General settings" parameter block. The "Software version" communications object is sent once after 5 seconds.

4.2. General settings

The "power" LED shows readiness, i.e. whether an auxiliary voltage is used for the device. Set the parameter to "no" if the LED is to remain off at all times.

Use standby LED	<u>Yes</u> • No
-----------------	-----------------

Set basic characteristics of data transfer.

Transmission delay after power-up and programming	<u>5 s</u> • ... • 2 h
Maximum message rate	<ul style="list-style-type: none"> • 1 message per second • ... • <u>0 messages per second</u> • ... • 20 messages per second

Select which channels and temperature controls you would like to use. The channels control the connected heating/cooling systems on the output channels 1 to 8. Set the

ambient climate automatic control in the temperature controls. The controls may be used both for internal channels and for other heating/cooling actuators.

Use channel 1...8	Yes • <u>No</u>
Use temperature control 1...4	Yes • <u>No</u>

4.3. Channel 1...8

Use the channel menus to select the controls for the heating or cooling system connected to the respective output channel.

First, select the type of valve, then the valve protection interval. This is the interval after which the valve is opened and closed once to avoid jamming.

Valve type	<ul style="list-style-type: none"> • <u>normally closed</u> • normally open
Valve protection interval (days) (0=deactivated)	0...255; <u>14</u>

Select the **control type** for the valve:

Control type	<ul style="list-style-type: none"> • via object (1 bit) • via object (8 bit ON OFF) • <u>via object (8 bit PWM)</u> • via temperature controller
--------------	--

When controls are effected via a **1 bit object**, fixed output values are selected for 1 (On) and 0 (Off);

Value of output when object value = 1	0... <u>100</u>
Value of output when object value = 0	<u>0</u> ...100

When controls are effected via a **8 bit object**, fixed output values are selected for "not 0 (On) and 0(Off);

Output value if object value is not 0	0... <u>100</u>
Output value if object value is 0	<u>0</u> ...100

For controls via an **8 bit object with pulse width modulation (PWM)**, only the basic time for the pulse width modulation is set (next setting).

If control takes place **via one of the internal temperature controls**, control and variable are selected.

Temperature controller no.	1 • 2 • 3 • <u>4</u>
----------------------------	----------------------

Actuating variable	<ul style="list-style-type: none"> • Heating level <u>1</u> • Heating level 2 • Cooling level 1 • Cooling level 2 • Common level 1 • Common level 2
--------------------	---

Please note that for a reset time of less than 5 minutes, the pulse with modulation may only be modified in degrees of 5%.

For all control types, add the basis time for the valve pulse width modulation. The basis time determines the signal duration for 100% open, i.e. a basic time of 100 seconds refers to a signal of 30 seconds (followed by 70 seconds without a signal) 30% opening of the valve.

Valve PWM basis time in seconds	1...6000; <u>100</u>
---------------------------------	----------------------

Select whether you want the control object to be monitored (not for controls via internal temperature control)

Use control object monitoring	Yes • No
Monitoring time	5 s ... 2 h; <u>10 min</u>
Output value in case of time out (in %)	0...100

Determine whether the output may also be controlled manually and configure the manual function and automatic switches.

If manual control is disabled, the keys on the device are not activated. If manual operation is activated, manual mode becomes active when a key is pressed on the device or respective information is received via the "Channel X: Auto / Manual" object.

Allow manual operation	Yes • <u>No</u>
Object evaluation	<ul style="list-style-type: none"> • <u>Auto = 0</u> Manual = 1 • Auto = 1 Manual = 0
Object value prior to 1. communication	<u>0</u> • 1
Output value when On (in %)	0... <u>100</u>
Output value when Off (in %)	<u>0</u> ...100
Object "Auto / Manual" sends	<ul style="list-style-type: none"> • <u>not</u> • periodically • on change • on change and periodically
Transmit cycle (for periodic transmission only)	5 s ... 2 h; <u>10 s</u>
Switching to Automatic mode is carried out	<ul style="list-style-type: none"> • not • after a period of time • <u>upon extended key actuation (> 3 s)</u> • upon extended button actuation or upon time setting
Time (only if switched to time)	5 s ... 2 h; <u>1 min</u>

Determine when the general channel status (e.g. ON, OFF, percentage) is to be sent.

Object "Control / Status" sends	<ul style="list-style-type: none"> • <u>not</u> • periodically • on change • on change and periodically
Transmit cycle (for periodical transmission only)	5 s ... 2 h; <u>10 s</u>

The channel may be blocked by a **blocking object** (e. g. block during ventilation). The output value during the block can be set.

Use block	Yes • <u>No</u>
Output value when blocked (in %)	<u>0</u> ...100
Object evaluation	<ul style="list-style-type: none"> • <u>1 = block 0 = release</u> • 0 = block 1 = release
Object value prior to 1. communication	<u>0</u> • 1

The **channel LED** shows when the output channel is ON. When the channel is switched on in automatic mode, the LED is on. When the channel is switched on in manual mode, the LED flashes.

LED light or flashing may be switched off after a certain period to save energy.

Channel LED	<ul style="list-style-type: none"> • <u>active when output ON</u> • active when output ON for certain period
Lighting time (in minutes)	1...60; <u>10</u>

4.4. Temperature controller

The **KNX K8 actuator** provides eight temperature controls that are independent of the device outputs and thus may also be used for the control of other heating/cooling actuators.

4.4.1. General regulation

For an adequate regulation of the indoor temperature, comfort, standby, eco and building protection modes may be used.

Comfort when present,

Standby during short absences,

Eco as a night-time mode and

Frost/heat protection (building protection) during longer absences.

The settings for the temperature control include the set point temperatures for the individual modes. Objects are used to determine which mode is to be selected. A change of mode may be triggered manually or automatically (e.g. by a timer, window contact).

The **mode** may be switched with two 8 bit objects of different priority. Objects "... HVAC mode (Prio 2)" for switching in everyday operation and "... HVAC mode (Prio 1)" for central switching with higher priority. The objects are coded as follows:

ID	Name	Encoding	Range	Use
20,102	DPT_HVACMode	field1 = HVACMode 0 = Auto 1 = Comfort 2 = Standby 3 = Economy 4 = Building Protection	[0 ... 4]	HVAC

Alternatively, you can use three objects, with one object switching between eco and standby mode and the two others are used to activate comfort mode or frost/heat protection mode. The comfort object then blocks the eco/standby object, and frost/heat protection objects have the highest priority. Objects

"... Mode (1: Eco, 0: Standby)",

"... comfort activation mode" and

"... frost/heat protection activation mode"

Switch mode via	<ul style="list-style-type: none"> • two 8-bit objects (HVAC modes) • three 1-bit objects
-----------------	---

Select the mode to be activated after reset (e.g. power failure, reset of the line via the bus). (Default).

Then configure a block of the temperature control by the blocking object.

Mode after reset	<ul style="list-style-type: none"> • Comfort • Standby • Eco • <u>Building protection</u>
Behaviour of the blocking object at value	<ul style="list-style-type: none"> • <u>1 = block 0 = release</u> • <u>0 = block 1 = release</u>
Blocking object value before 1st communication	0 • <u>1</u>

Determine when the current settings of the controls are to be transmitted to the bus. Periodic transmission is safer if a message does not reach a recipient. You may also set up periodical monitoring by the actuator with this setting.

Send actuating variables	<ul style="list-style-type: none"> • <u>on change</u> • on change and periodically
cycle <i>for periodical transmission only</i>	5 s • ... • <u>5 min</u> • ... • 2 h

The status object shows the current status of the output variable (0 = OFF, >0 = ON) and may, for example, be used for visualisations or to switch off the heating pump as soon as the heating is off.

Send status objects	<ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically
cycle <i>for periodical transmission only</i>	5 s • ... • <u>5 min</u> • ... • 2 h

Then define the type of setting. Heating and/or cooling may be controlled in two levels.

Type of control	<ul style="list-style-type: none"> • <u>One-stage heating</u> • Dual-speed heating • Single-speed cooling • Dual-stage cooling • Single-speed heating + Single-speed cooling • Dual-speed heating + Single-speed cooling • Dual-speed heating + Dual-speed cooling
-----------------	---

4.4.2. General set point values

You may enter separate set point values for each mode or use the comfort set point as a basic value.

If you are using the controls for both heating *and* cooling, you may also select the setting "separately with switching object". Systems used for cooling in the summer and for heating in the winter can thus be switched from one to the other.

If you are using the basic value, only the deviation from the comfort set point value is listed for the other modes (e. g., 2°C less for standby mode).

Setting the nominal values	<ul style="list-style-type: none"> • <u>separate</u> with switching object • separate without switching object • with comfort set point as a basis
Behaviour of the switching object at value <i>only if switching object is used</i>	<ul style="list-style-type: none"> • <u>0 = Heating 1 = Cooling</u> • 1 = Heating 0 = Cooling
Switching object value before 1st communication <i>only if switching object is used</i>	<u>0</u> • 1

The grades for the set point changes is predefined. Modifications may only remain active temporarily (do not save) or remain saved even after voltage recovery (and programming). This also applies to a comfort extension.

Grading for set point changes (in 0.1 °C)	1... 50; <u>10</u>
--	--------------------

Saving set point value(s) and comfort extension time	<ul style="list-style-type: none"> • not • <u>after voltage recovery</u> • after voltage recovery and programming (do not use for first start-up!)
--	---

The control may be manually reset to comfort mode from eco, or night mode. This allows the user to maintain the daily nominal value for a longer time, e.g. when having guests. The duration of this comfort extension period is set. After the comfort extension period is terminated, the system returns to eco mode.

Comfort extension time in seconds (can only be activated from eco mode)	1...36000; <u>3600</u>
--	------------------------

Set point Comfort

Comfort mode is usually used for daytime mode when people are present. A starting value is defined for the comfort set point as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication <i>not upon saving the set point value after programming</i>	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

If the comfort set point is used as the basis, a dead zone is determined for the control mode "heating *and* cooling" to avoid direct switching from heating to cooling.

Dead zone between heating and cooling <i>only if both heating AND cooling are used.</i>	1...100; <u>50</u>
--	--------------------

Set point for standby

Standby mode is usually used for daytime mode when people are absent.

If set point values are entered separately:

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

If the comfort set point value is used as a basis:

If the comfort set point value is used as a basis, the deviation from this value is set.

Reduce nominal heating value (in 0.1°C) for heating	0...200; <u>30</u>
Increase nominal cooling value\r\n (in 0.1°C) for cooling	0...200; <u>30</u>

Eco set point

Eco mode is usually used for night mode.

If set point values are entered separately:

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

If the comfort set point value is used as a basis:

If the comfort set point value is used as a basis, the deviation from this value is set.

Reduce nominal heating value (in 0.1°C) for heating	0...200; <u>50</u>
Increase nominal cooling value\r\n (in 0.1°C) for cooling	0...200; <u>60</u>

Set point values for frost/heat protection (building protection)

The building protection mode is used during longer absences. Set points for frost protection (heating) and heat protection (cooling) are determined which may not be modified from outside (no access via operating devices etc.). The building protection mode may be activated with delay, which allows you to leave the building before the controls switch to frost/heat protection mode.

Nominal value frost protection\r\n (in 0,1°C)	-300...800; <u>70</u>
Nominal value heat protection (in 0,1°C)	-300...800; <u>350</u>
Activation delay	no • 5 s • ... • <u>5 min</u> • ... • 2 h

General variables

This setting appears for the control types "Heating *and* Cooling" only. This is where you can decide whether to use a common variable for heating and cooling. If the 2nd level has a common variable, this is also where you determine the control mode of the 2nd level.

For heating and cooling	<ul style="list-style-type: none"> • <u>separate variables are used</u> • common variables are used for Level 1 • common variables are used for Level 2 • common variables are used for Level 1+2
Control type <i>only for level 2</i>	<ul style="list-style-type: none"> • 2-point control • PI control
Regulating variable of the 2nd Stage is on <i>only for level 2</i>	<ul style="list-style-type: none"> • <u>1-bit object</u> • 8-bit object

4.4.3. Heating control level 1/2

If a heating control mode is configured, one or two setting sections for the heating levels are displayed.

On the 1st level, heating is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level heating), heating is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the lowest set point value from which the 2nd level is then added (when values exceed this set point).

Set point difference between levels 1 and 2 (in 0.1°C) <i>only for level 2</i>	0...100; <u>40</u>
Control type <i>only for level 2 and if no common variables are used</i>	<ul style="list-style-type: none"> • 2-point control • PI control

PI control with control parameters:

This setting allows individual input of the parameters for PI control.

Control type	• PI control
Set control using	<ul style="list-style-type: none"> • Controller parameter • provided applications

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum heating power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the

variable. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached. You should set the time appropriate to the heating system at this point (note manufacturer instructions).

Maximum control variable is reached at set point/actual difference of (in °C)	0... <u>5</u>
Reset time (in min.)	1...255; <u>30</u>

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating. Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> • <u>not be transmitted</u> • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

PI control with predetermined application:

This setting provides fixed parameters for frequent applications.

Control type	• PI control
Set control using	<ul style="list-style-type: none"> • Controller parameter • provided applications
Application	<ul style="list-style-type: none"> • Warm water heating • Floor heating • Convection unit • Electric heating
Maximum control variable is reached at set point/actual difference of (in °C)	Warm water heating: 5 Floor heating: 5 Convection unit: 4 Electric heating: 4
Reset time (in min.)	Warm water heating: 150 Floor heating: 240 Convection unit: 90 Electric heating: 100

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating. Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> • not be transmitted • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

2-point-rule (only level 2):

The 2-point-rule is used for systems which are only set to ON or OFF.

Control type <i>is determined at a higher level for common variables</i>	• 2-point control
---	--------------------------

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

Hysteresis (in 0.1°C)	0...100; <u>20</u>
Actuating variable is a	• <u>1-bit object</u> • <u>8-bit object</u>
Value (in %) <i>only for 8 bit objects</i>	0... <u>100</u>

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	• not be transmitted • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

4.4.4. Cooling control level 1/2

If a cooling control mode is configured, one or two setting sections for the cooling levels are displayed.

On the 1st level, cooling is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level cooling), cooling is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the highest set point value from which the 2nd level is then added (when values exceed this set point).

Set point difference between levels 1 and 2 (in 0.1°C) <i>only for level 2</i>	0...100; <u>40</u>
Control type <i>only for level 2 and if no common variables are used</i>	• 2-point control • PI control

PI control with control parameters:

This setting allows individual input of the parameters for PI control.

Control type	• PI control
--------------	---------------------

Set control using	<ul style="list-style-type: none"> • Controller parameter • provided applications
-------------------	--

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum cooling power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the variable. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached.

You should set the time appropriate to the cooling system at this point (note manufacturer instructions).

Maximum control variable is reached at set point/actual difference of (in °C)	0... <u>5</u>
Reset time (in min.)	1...255; <u>30</u>

Now determine what should be transmitted when the control is blocked.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> • <u>not be transmitted</u> • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

PI control with predetermined application:

This setting provides fixed parameters for a cooling ceiling

Control type	<ul style="list-style-type: none"> • PI control
Set control using	<ul style="list-style-type: none"> • Controller parameter • provided applications
Application	<ul style="list-style-type: none"> • Cooling ceiling
Maximum control variable is reached at set point/actual difference of (in °C)	Cooling ceiling: 5
Reset time (in min.)	Cooling ceiling: 30

Now determine what should be transmitted when the control is blocked.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> • not be transmitted • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

2-point-rule (only level 2):

The 2-point-rule is used for systems which are only set to ON or OFF.

Control type <i>is determined at a higher level for common variables</i>	• 2-point control
---	--------------------------

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

Hysteresis (in 0.1°C)	0...100; <u>20</u>
Actuating variable is a	<ul style="list-style-type: none"> • <u>1-bit object</u> • 8-bit object
Value (in %) <i>only for 8 bit objects</i>	0... <u>100</u>

Now determine what should be transmitted when the control is blocked.
Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> • not be transmitted • send a specific value
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

